


Victoriana Free Standing Tub Filler

MA Code Accepted

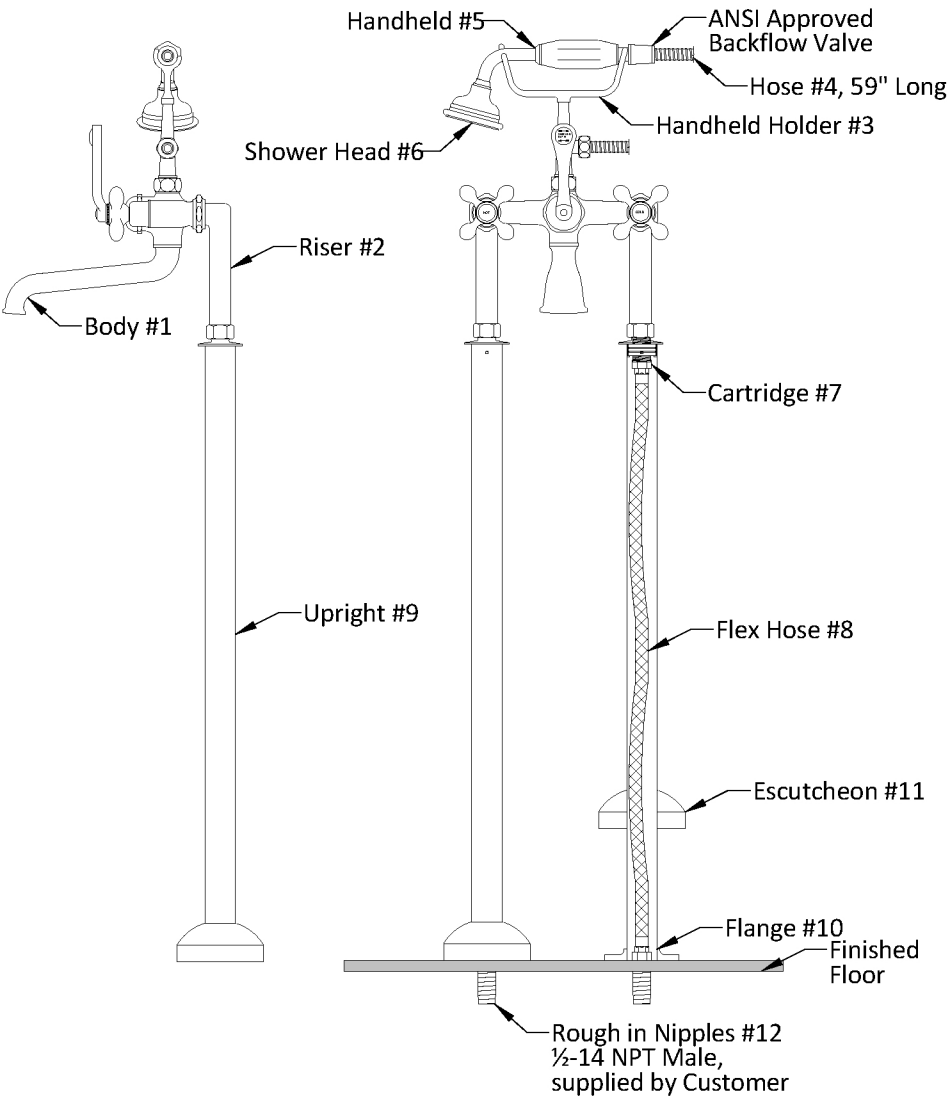

Installation Steps

- A - Prepare rough in Nipples #8 on 7" Centers
- B - Mark off holes for Flanges #7
- C - Attach Flanges #7 Solidly to Floor
- D - Attach Union #2 to Flex Hose #3
- E - Attach Assembly at D to Riser #4
- F - Slide Escutcheons #6 Upright Poles #5
- G - Loosen Set Screws on Upright #5 and push assembly at point E inside Upright #5
- H - Attach Flex Hose #3 to Nipples #8
- J - Attach Extension #10 to Riser #4
- K - Attach Body #1 to Extension #10
- L - Support Fixture and test for leaks
- M - After Test Remove Body #1 from Extension #10
- N - Gently pull assembly at E out of Upright #5
- P - Screw Uprights #5 all the way down into Flanges #7
- Q - To avoid kinks push assembly at "D" and turn slightly to place in position
- R - Reattach Body #1 to Extension #10
- S - Tighten set screws on Union #2
- T - Connect Handheld Holder #11 to Body #1
- U - Connect Hose #12 to Handheld Holder #11 and Handheld #9

